

# PRO 2 FRONT HUB

PRO II FRONT HUB PARTS LIST		
ITEM NO.	DESCRIPTION	PART NO.
1	FRONT HUB BODY	HUB111
2	CENTRE TUBE	HUB 214
3	DIA 20 X 3MM O RING	INC WITH HUB 214
4	9 MM RWS SPACER	HUB 443
6	20mm CONVERSION SPACER	HUB420
7	DIA. 17 x 1.5 O-RING	INC. WITH HUB 419
8	15 MM SPACER	HUB 441
9	QR SPACER	HUB419
10	BEARING	61804 2RS

