

BOX CONTENTS

- Clamp Assembly • 1 x M5 Screw

TOOLS REQUIRED

- 4mm Hex • T25 Torx Driver

PRODUCT SPECIFICATIONS

- Mount Hope Dropper Lever to Handlebars
- Mount any 'SRAM' type interface dropper lever or shifter to handlebars
- Perfectly matches Hope brake master cylinders
- Hinged clamp for easy fitting/removal and adjustment

ATTACH CLAMP TO HANDLEBARS

001_ Fully remove the M5 screw from the clamp.

002_ Open the clamp to fit over the handlebars, close the clamp around the handlebar and insert the M5 screw through both sides of the clamp.

003_ Install the dropper lever/shifter onto the clamp. Thread the M5 screw into the threaded mounting hole on the dropper lever. Start the thread by hand to avoid cross threading and lightly tighten with a 4mm Hex.

004_ Adjust the fore/aft position by loosening the M5 screw and rotating the clamp around the handlebars.

005_ Adjust the lateral position by loosening the M5 screw and sliding the clamp along the handlebars.

006_ When the desired position is found fully tighten the M5 screw.

Recommended tightening torque: **4-5Nm**.

INST060_EN: Instruction - Dropper Lever Clamp - V1


001




002




003

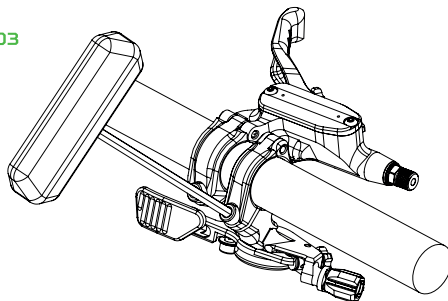

004

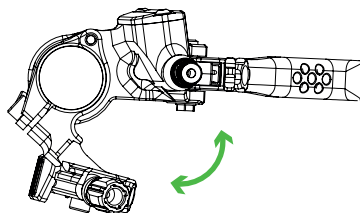

005

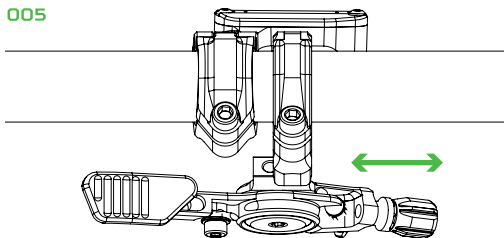

CONTENU DE LA BOÎTE

- Bride de cindre • 1 x vis de serrage M5

OUTILLAGE NÉCESSAIRE

- Clef Allen de 4mm • Clef Torx T25

CARACTÉRISTIQUES DU PRODUIT

- Compatible avec la commande de tige de selle Hope
- Compatible avec n'importe quel shifter ou commande de tige de selle ayant une interface type 'SRAM'
- S'accorde parfaitement avec les composants Hope
- Bride à charnière pour faciliter la pose, le démontage et le réglage

MONTAGE DE LA BRIDE AU GUIDON

001_ Retirez complètement la vis M5 de la bride.

002_ Ouvrez la bride pour la placer autour du guidon, refermez-la, puis insérez la vis M5 à travers les deux côtés de la bride.

003_ Installez le shifter ou commande de tige de selle sur le collier de serrage. Vissez la vis M5 dans le trou de fixation fileté. Commencez à visser à la main pour éviter de fausser le filetage, puis serrez légèrement à l'aide d'une clef Allen de 4mm.

004_ Réglez la position avant/arrière en desserrant la vis M5 et en faisant pivoter la bride autour du guidon.

005_ Réglez la position latérale en desserrant la vis M5 et en faisant glisser la bride le long du guidon.

006_ Une fois la position souhaitée trouvée, serrez raisonnablement la vis M5.

Couple de serrage recommandé : 4-5N.m

INST060_FR: Instruction - Dropper Lever Clamp - V1


001




002




003

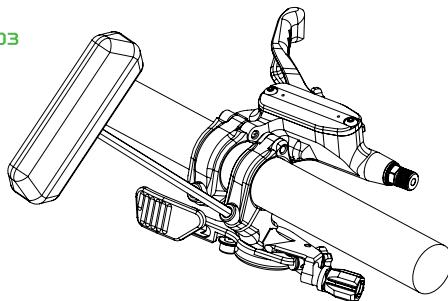

004

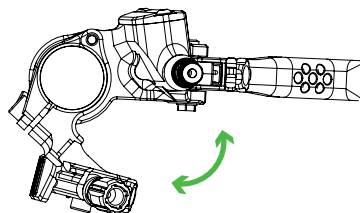

005

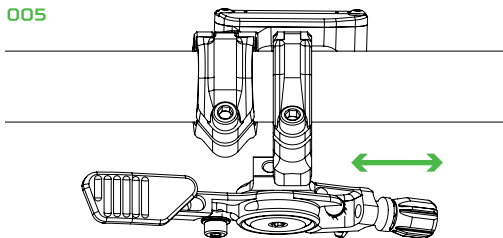

**DROPPER
LEVER
CLAMP**

hope