

ROAD BOTTOM BRACKET - STAINLESS STEEL AND CERAMIC

COMPATIBILITY:

Hope Bottom brackets work with any cranks which are compatible with Shimano Hollowtech II road cranks.

1/FRAME PREPARATION:

It is critical to bearing life that the frame is prepared correctly. Chase threads and face ends of BB shell to ensure they are clean and square.

2/INSTALL BB CUPS:


Remove Non-Drive cup from pre-assembled BB. Determine spacers required (see below). Apply copious amounts of grease to the BB cups and the frame BB shell. Thread Drive-Side BB cup with centre tube and appropriate spacers (see below) anti-clockwise into RH side of frame using correct spanner and tighten.

Thread Non-Drive BB cup and appropriate spacers (if required) clockwise into LH side of frame and tighten.

3/INSTALL CRANKS:

Follow manufacturer's instructions.

Note: Hope BB's allow cranks to fit directly in the bearing inner race, not through a plastic bush

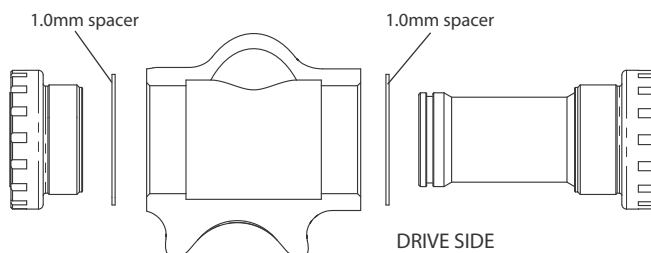


Hope Technology
Fernbank Avenue
Barnoldswick
BB18 5UY
United Kingdom
Tel: +44 (0)1282 851200
Fax: + 44 (0)1282 851201



www.hopetech.com

ROAD BOTTOM BRACKET - STAINLESS STEEL AND CERAMIC

Issue: 1
Feb 2008

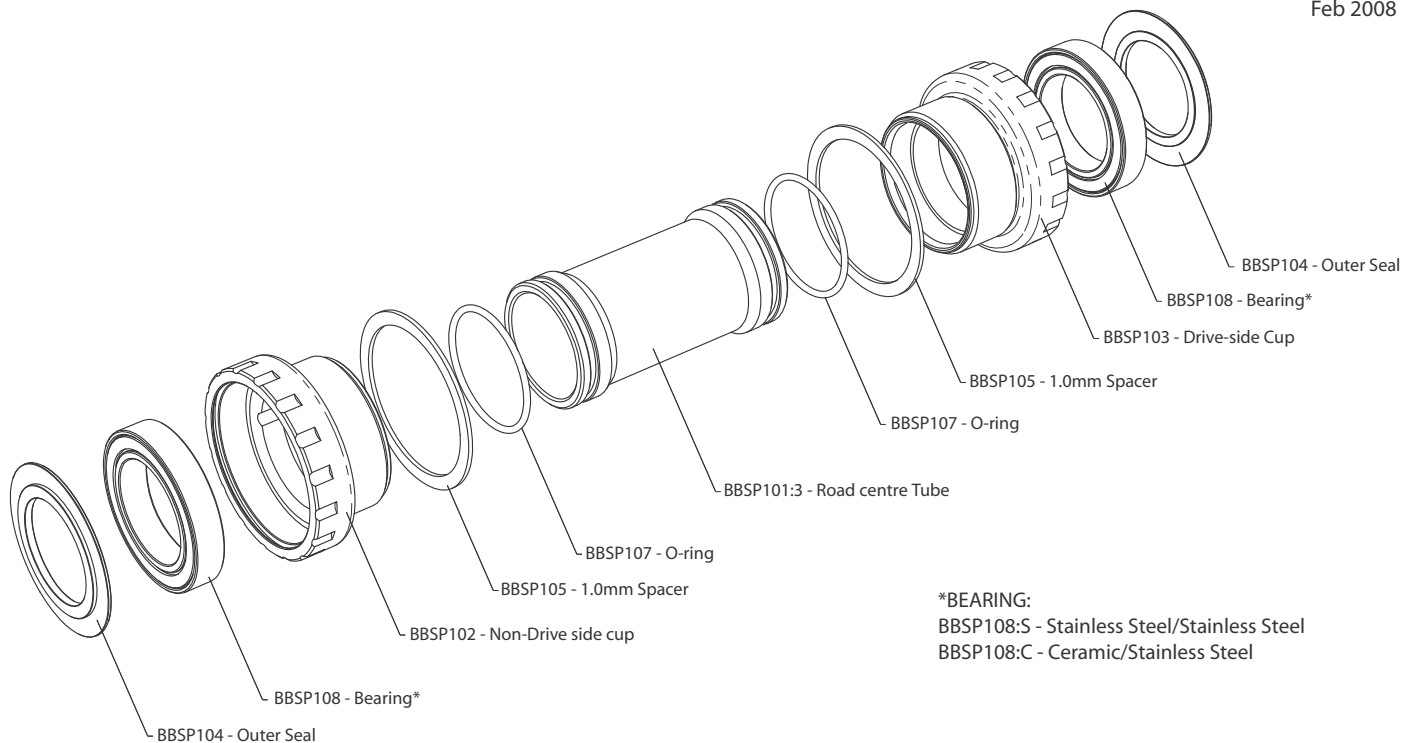

*BEARING:

BBSP108:S - Stainless Steel/Stainless Steel
BBSP108:C - Ceramic/Stainless Steel



www.hopetech.com