

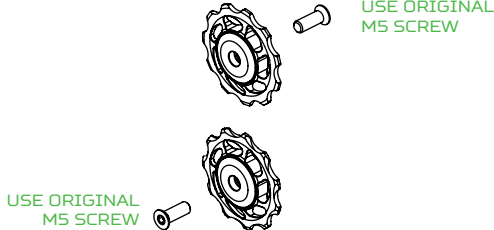
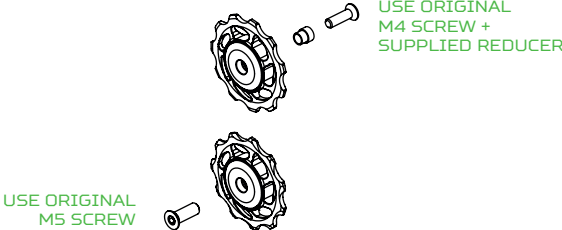
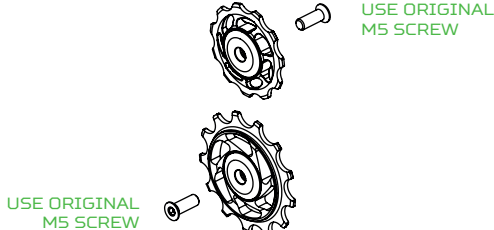
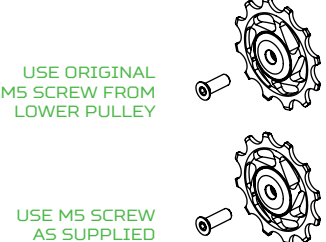
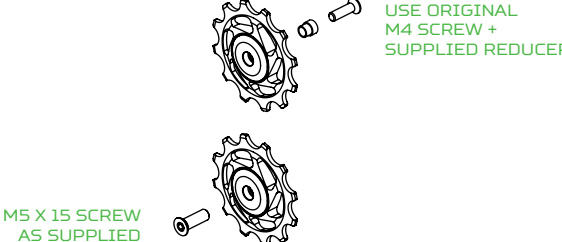
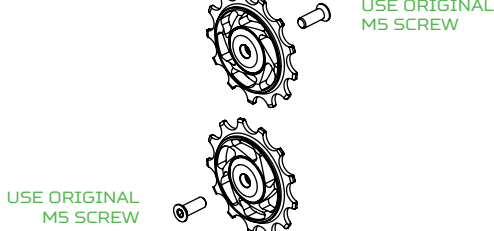


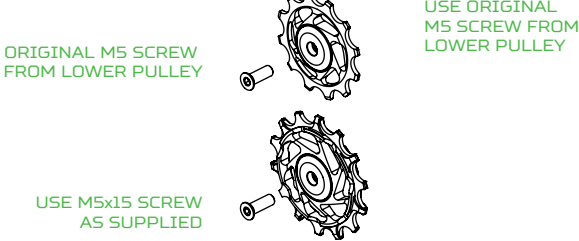

JOCKEY WHEEL COMPATABILITY CHART

Jockey Wheels	Fitting Configuration A	Compatability	Fitting Configuration B	Compatability
11/11T		SRAM 10/11 SPEED MTB SRAM 11 SPEED ROAD SHIMANO 10/11 SPEED MTB (except Linkguide) SHIMANO 10/11/12 SPEED ROAD SHIMANO GRX 10 SPEED (RX400) SHIMANO GRX 1x 11 SPEED (RX812/RX817) SHIMANO CUES 9 SPEED (U4010/U4020) SHIMANO CUES Di2 (U6050/U6070/U8050)		SRAM 10 SPEED ROAD
11/13T		SHIMANO GRX 2x 11 SPEED (RX810/RX815) SHIMANO GRX 2x 12 SPEED (RX820/RX825) SHIMANO CUES 2x 10/11 SPEED (U6020/U8020)		
12/12T		SRAM 11 SPEED MTB SRAM 11 SPEED ROAD		SRAM 12 SPEED ROAD SRAM 12 SPEED XPLR
13/13T		SHIMANO 12 SPEED MTB / LINKGUIDE SHIMANO 1x 11 SPEED DEORE (M5100) SHIMANO GRX 1x 12 SPEED (RX822/RX827) SHIMANO CUES 1x 9/10/11 SPEED (U4000/U6000/U8000)		
12/14T		SRAM 12 SPEED EAGLE MTB		
14/16T		SRAM 12 SPD TRANSMISSION SRAM 13 SPD XPLR		

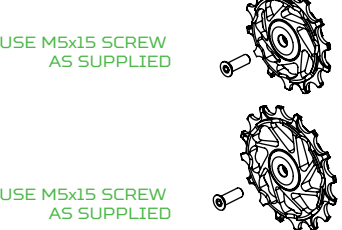

- >> Match rotation arrow on jockey wheel with direction of chain when pedalling forwards.
- >> Fine adjustment of gear indexing may be required after installing new jockey wheels.
- >> Always count the number of teeth on your existing jockey wheels and swap like for like.